



83-120 Removal and installation of heater blower

Removal


- 1 Remove cover from under instrument panel at the right (68-150).
- 2 Pull off plug from blower motor.
- 3 Remove screw from contact plate.

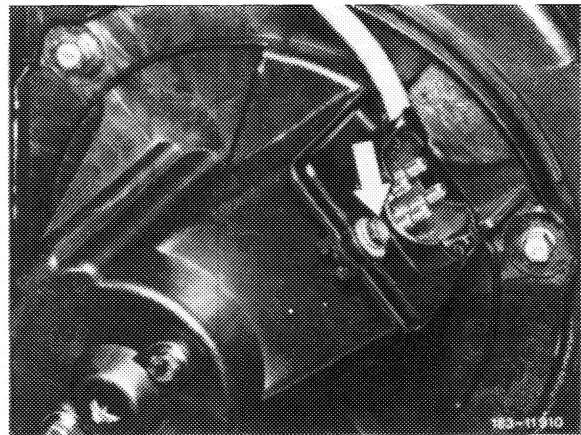


- 4 Lift contact plate and pull off both connecting wires for series resistance.

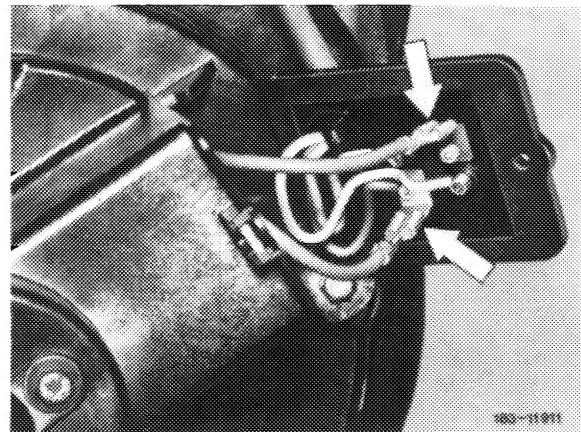

- 5 Remove screws from blower motor flange.

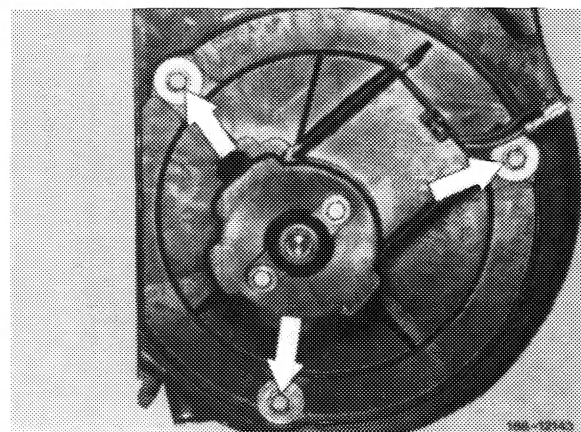

6 Lift blower motor out of blower housing.

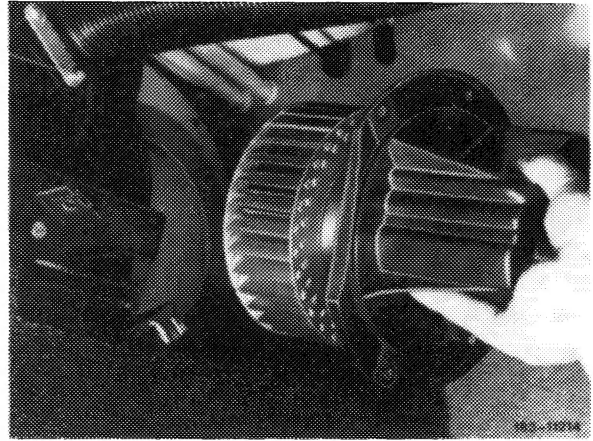

Installation

7 For installation proceed vice versa.